IMPORTANT **SAFETY RULES** Read, Understand, and Follow all

Instructions Carefully before Installing and using this Product.

Krystal Clear[™] Deluxe Saltwater System (salt in pool) **Model 8110**



For illustrative purposes only.

Don't forget to try these other fine Intex products: Pools, Pool Accessories, Inflatable Pools and In-Home Toys, Airbeds and Boats available at fine retailers or visit our website.



IMPORTANT! DO NOT RETURN PRODUCT TO STORE

To purchase parts and accessories or to obtain non-technical assistance, Visit www.intexcorp.com

For technical assistance and missing parts call us toll-free (for U.S. and Canadian Residents): 1-800-234-6839

Monday through Friday, 8:30am to 5:00pm Pacific Time

101**-R0-0908

Warnings	3
Parts List & Reference	4-6
Product Information & Specifications	7
Set Up Instructions	8-12
Salt and Pool Water Volumes	13
Intex Pools Salt Table	14
Intex Pools Operating Time Table	15
Non-Intex Pools Salt Table	16
Non-Intex Pools Operating Time Table	16
Operating Instructions	17-18
Alarm Codes	. 19
LED Code Chart	20
Maintenance	21-23
Long Term Storage	23
INTEX 3-Way Test Strips	23
Pool Maintenance and Chemical Definitions	24
Troubleshooting Guide	25-26
General Aquatic Safety	27
Limited Warranty	28
Pool Safety Sign	29
Intex Service Center Locations	30

SAFETY RULES

IMPORTANT SAFETY RULES

Read, Understand and Follow All Instructions Carefully Before Installing and Using this Product.

READ AND FOLLOW ALL INSTRUCTIONS

WARNING

- To reduce the risk of injury, do not permit children to use this product. Always supervise children and those with disabilities.
- Risk of electric shock. Connect this product only to a grounding type receptacle protected by a ground-fault circuit interrupter (GFCI). Contact a qualified electrician if you cannot verify that the receptacle is protected by a GFCI.
- Do not bury electrical cord. Locate cord where it will not be damaged by lawn mowers, hedge trimmers, and other equipment.
- To reduce the risk of electric shock, the supply cord cannot be replaced. If the cord is damaged, the appliance should be replaced immediately.
- To reduce the risk of electric shock, do not use extension cords, timers, plug adaptors or converter plugs to connect unit to electric supply; provide a properly located outlet.
- Assembly and disassembly by adults only.
- Do not attempt to plug in or unplug this product while standing in water or when your hands are wet.
- Do not use an appliance leakage current interrupter (ALCI) in place of a GFCI since the ALCI will not protect people.
- Position this product away from pool to prevent a child from climbing on product to access the pool.
- Children must stay away from this product and all electrical cords.
- Do not operate this product when pool is occupied.
- Always unplug this product from the electrical outlet before removing, cleaning, servicing or making any adjustment to the product.
- This product is intended to be used only for the purposes described in the manual!

FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN PROPERTY DAMAGE, ELECTRIC SHOCK, ENTANGLEMENT OR OTHER SERIOUS INJURY OR DEATH.


A CAUTION

This product is for use with storable pools only. Do not use with permanently-installed pools. A storable pool is constructed so that it is capable of being readily disassembled for storage and reassembled to its original integrity. A permanently-installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage.

These product warnings, instructions and safety rules provided with the product represent some common risks of water recreation devices and do not cover all instances of risk and danger. Please use common sense and good judgement when enjoying any water activity.

For Portable, Above-The-Ground Pools Only


PARTS LIST

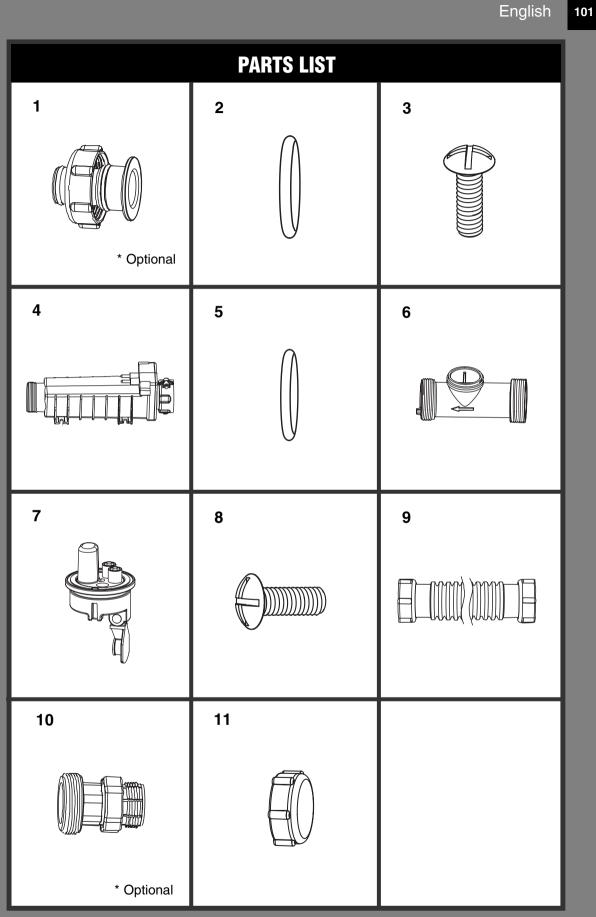

NOTE: Drawings for illustration purpose only. May not reflect actual product. Not to scale.

PARTS REFERENCE

Before assembling your product, please take a few minutes to check the contents and become familiar with all the parts.

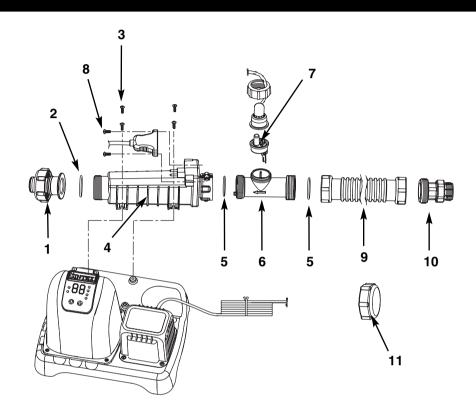

NOTE: Drawings for illustration purpose only. May not reflect actual product. Not to scale.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


PARTS REFERENCE (continued)

Before assembling your product, please take a few minutes to check the contents and become familiar with all the parts.

RE	F. NO.			
COMMON	FOR CONNECTION TO FILTER PUMPS WITH 1-1/4" (32MM) HOSE SIZE	DESCRIPTION	QTY.	SPARE PART NO.
	1	ADAPTOR A WITH THREADED COLLAR (OPTIONAL)	1	10849
2		O-RING A	1	10712
3		SCREW	4	10713
4		ELECTROLYTIC CELL (WITH TITANIUM PLATES) (O-RING A INCLUDED)	1	10888
5		O-RING B	2	10715
6		FLOW SENSOR CONDUIT (O-RING B & O-RING C INCLUDED)	1	11196
7		FLOW SENSOR	1	11143
8		SHORT SCREW	2	10881
9		CONNECTOR HOSE WITH THREADED FITTINGS	1	10720
	10	THREADED ADAPTOR B (OPTIONAL)	1	10722
11		CELL COVER	1	11131

HOW THE CHLORINE IS GENERATED

Common salt (sodium chloride) is made up of two elements, sodium and chloride. During the installation of your Saltwater System, a measured quantity of salt is dissolved in the pool water to make it slightly salty. This pool water is passed through the Saltwater System's electrolytic cell to produce chlorine which is dissolved instantly in the water. The chlorine instantly starts to destroy bacteria, algae and oxidizes other organic materials.

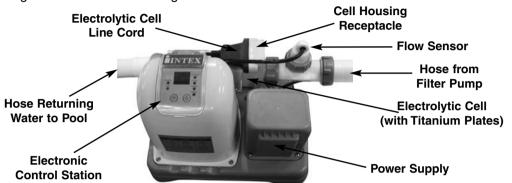

Key Saltwater System Parts:

Power Supply

The power supply converts AC electrical current to a low voltage DC current. This is required by the cell to perform the electrolysis that creates chlorine.

• Electrolytic Cell (with Titanium Plates)

The electrolytic cell contains bipolar titanium electrodes which perform the electrolysis and produce liquid chlorine when energized with DC electricity. Chlorine is generated when pool water containing salt passes through the cell. The chlorine production can be varied by changing the number of hours the Saltwater System is operating each day. The Saltwater System has a built-in self cleaning cycle that operates every twenty hours without interrupting chlorine production.

Flow Sensor

The flow sensor protects the electrolytic cell and ensures there is adequate water flowing through the cell. When the water flow drops below minimum flow rate, the electrolytic cell will automatically shut down to protect the titanium plates. A safety buzzer will sound and the LED display panel will show a signal code (see "LED Code Chart") indicating the problem.

• Electronic Control Station

The electronic control station contains an LED display panel and a set of pushbuttons to program the Saltwater System operating hours. It also monitors the different parameters such as salt level, water flow and the electrolytic cell activity. If any deviation from the norm occurs then a buzzer will sound and the LED display panel will show a signal code (see "LED Code Chart") indicating the problem.

PRODUCT SPECIFICATIONS

Power: Amperage: Wattage: Ideal Salt Level: Maximum Chlorine Output/hour: Minimum Flow Rate: Limited Warranty: 110 - 120 Volt AC 2.5 A 250W 3000 ppm (parts per million) 24 grams/hour 700 ~ 4000 gallons/hour (2650 - 15140 liters/hour) 2 Years (see "Limited Warranty")


SET-UP INSTRUCTION

IMPORTAN

The Saltwater System must be installed as the last piece of pool equipment in the water return line to the pool as displayed in Drawing #1. This location extends the life of the titanium plates.

- 1. Assemble the above-ground-pool (AGP) and its filter pump per installation instructions.
- 2. Remove the Saltwater System and it's accessories from the packaging.
- **3**. Place the Saltwater System in line after the filter pump.
- 4. Connect the connector hose (9) to the Saltwater System inlet.


For connection to filter pumps with 1-1/4" (32mm) hose size: <u>Drawing #1</u>

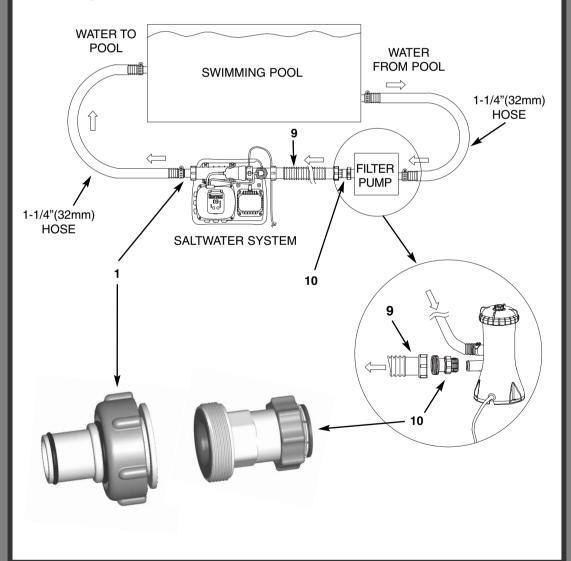


SET-UP INSTRUCTION (continued)

 If your above-ground-pool is filled up with water, unscrew the strainer grids from the strainer connectors and insert the black hat-like plugs into the strainer connectors before saltwater pool system installation. Go to step 2 directly if your pool is empty.


2. Connect the adaptor A (1) to the electrolytic cell (4) outlet as shown in Drawing #1. Tighten securely.

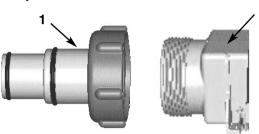

- Disconnect the water return (to the pool) hose from the filter pump connection, and connect it to the adaptor A (1) on the Saltwater System with a hose clamp. (see Drawing #1)
- Connect adaptor B (10) to the connector hose (9). Tighten securely. (see Drawing #1)

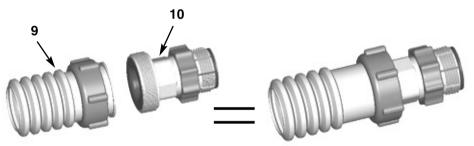



5. Connect adaptor B (10) to filter pump outlet connection (lower connection). Tighten securely.

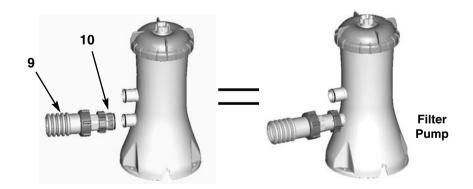

6. Return strainer grids to strainer connectors inside pool after removing black hat-like plugs that prevented water from flowing out of the pool.

SET-UP INSTRUCTION (continued)

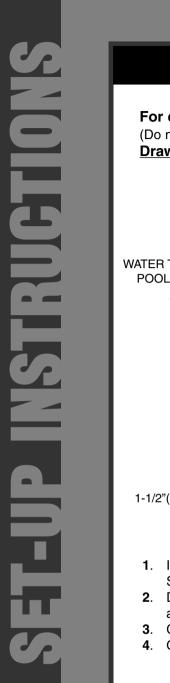

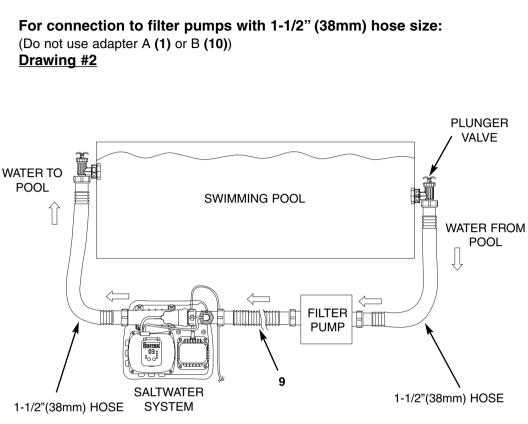


- 1. If your above-ground-pool is filled with water, close the plunger valves before Saltwater System installation. Go to step 2 directly if your pool is empty.
- 2. Disconnect the water return (to the pool) hose from the filter pump connection, and connect it to the Saltwater System outlet.
- 3. Connect the connector hose (9) to the filter pump outlet connection.
- 4. Open plunger valves to allow water to flow.

SET-UP INSTRUCTION (continued)


For connection to other filter pump (with different type of thread or no thread):

Saltwater System can also adapt to other filter pumps for those with different thread or without thread on the connection.

• Connect to 1-1/4" (32mm) filter pump outlet connection:

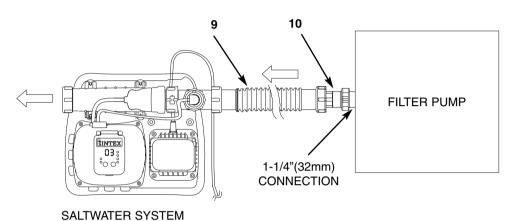

- 1. Connect adaptor B (10) to the connector hose (9). Tighten securely.
- 2. Connect adaptor B (10) to filter pump outlet connection. Tighten securely.
- Connect to 1-1/2" (38mm) filter pump outlet connection:

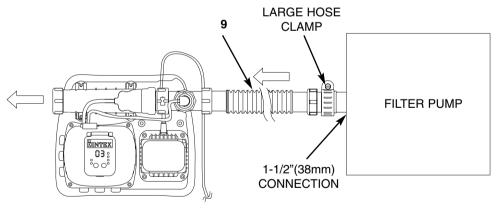


SALTWATER SYSTEM


1. Connect the connector hose (9) to the filter pump outlet connection with a large hose clamp. Tighten securely.

SET-UP INSTRUCTION (continued)

• Connect to 1-1/4" (32mm) hose:

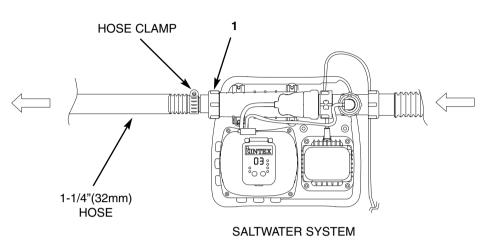

- 1. Connect the adaptor A (1) to the electrolytic cell (4) outlet. Tighten securely.
- 2. Connect the water return (to the pool) hose to the adaptor A (1) on the Saltwater System with a hose clamp.
- Connect to 1-1/2" (38mm) hose:

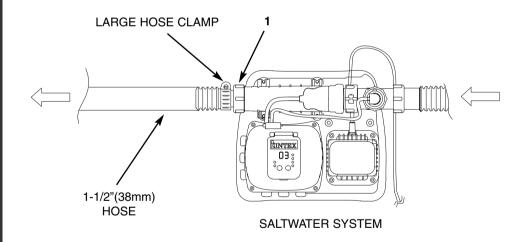

- 1. Connect the adaptor A (1) to the electrolytic cell (4) outlet. Tighten securely.
- 2. Connect the water return (to the pool) hose to the adaptor A (1) on the Saltwater System with a large hose clamp.

SALT & POOL WATER VOLUMES

Use only Sodium Chloride Salts

Use only sodium chloride (NaCl) salt that is at least 99.8% pure. It is also acceptable to use water conditioning salt pellets (the compressed forms of evaporated salt), but it will take longer time for them to dissolve. **Do not use iodized or yellow (yellow prussiate of soda) colored salt.** Salt is added to the pool water and the electrolytic cell uses this salt to create chlorine, the purer the salt the better the performance of the electrolytic cell.

Optimum Salt Levels

The ideal salt level in the pool water is between 2500-3500 ppm (parts per million) with 3000 ppm being optimal.

A too low salt level will reduce the efficiency of the Saltwater System and result in low chlorine production. A high salt level may begin to generate a salty taste to your pool water (this may occur at a salt level above 3500-4000ppm). Too high of a salt level may damage the power supply and cause corrosion to pool metal fixtures and accessories. The following "salt table" shows the quantity of salt to use. The salt in the pool is constantly recycled. Salt loss is due only to pool water physically removed from the pool. Salt is not lost due to evaporation.

How to Add or Remove Salt Adding Salt

- 1. Depress the ON button on the filter pump switch to circulate pool water.
- 2. Keep the Saltwater System "OFF".
- 3. Determine the amount of salt to be added (see "Salt Table").
- 4. Evenly spread the proper amount of salt around the inside perimeter of the pool.
- 5. To avoid clogging the filter, do not add salt through the skimmer.
- 6. Brush the pool bottom to speed up the dissolving process. Do not allow salt to pile up on the bottom of the pool. Run the filter pump 24 consecutive hours to thoroughly dissolve the salt.
- After 24 hours and if all the salt is dissolved, turn on the Saltwater System and set the saltwater pool system to desired operating time (see "Operating Time Table").

Removing Salt

If too much salt has been added, the unit will beep and display "code 92" (see "Alarm Codes"). You need to lower the salt concentration. The only way to lower the salt concentration is to partially drain the pool and refill with fresh water. Drain and refill approximately 20% of the pool's water until the "Code 92" disappears.

Pool Volume Calculation

Types of Pool	Gallons (pool size in feet)	Cubic Meters (pool size in meters)
Rectangular	Length x Width x Average Depth x 7.5	Length x Width x Average Depth
Circular	Length x Width x Average Depth x 5.9	Length x Width x Average Depth x 0.79
Oval	Length x Width x Average Depth x 6.0	Length x Width x Average Depth x 0.80

INTEX POOLS SALT TABLE

This table shows how much salt to use to achieve the desired 3000 ppm salt level and how much will be needed to maintain this level if it drops below this desired level.

	Pool Size	90% for Frame	/ (Calculated at Pool and 80% & Oval Pool)	Sta	eded for rtup 000ppm)	Low Salt	ded when Detected E "91")
		(Gals)	(Liters)	(Lbs)	(Kgs)	(Lbs)	(Kgs)
INTEX ABOVE G	ROUND POOLS (AGP's)						
	15' x 36" (457cm x 91cm)	2822	10681	65	30	20	10
	15' x 42" (457cm x 107cm)	3284	12430	80	35	20	10
	15' x 48" (457cm x 122cm)	3736	14141	95	45	20	10
EASY SET [®]	16' x 42" (488cm x 107cm)	3754	14209	95	45	20	10
POOL	16' x 48" (488cm x 122cm)	4273	16173	110	50	30	15
	18' x 42" (549cm x 107cm)	4786	18115	120	55	30	15
	18' x 48" (549cm x 122cm)	5455	20647	135	60	30	15
	18' x 52" (549cm x 132cm)	5894	22309	150	65	40	20
	15' x 36" (457cm x 91cm)	3282	12422	80	35	20	10
	15' x 42" (457cm x 107cm)	3861	14614	100	45	20	10
	15' x 48" (457cm x 122cm)	4440	16805	110	50	30	15
CIRCULAR	16' x 48" (488cm x 122cm)	5061	19156	125	55	30	15
METAL	16' x 52" (488cm x 132cm)	5501	20821	135	60	30	15
FRAME POOL	18' x 48" (549cm x 122cm)	6423	24311	160	75	40	20
	18' x 52" (549cm x 132cm)	6981	26423	175	80	40	20
	24' x 48" (732cm x 122cm)	11483	43462	290	130	75	35
	24' x 52" (732cm x 132cm)	12481	47241	310	140	85	40
ULTRA FRAME	16' x 48" (488cm x 122cm)	5061	19156	125	55	30	15
POOL	18' x 52" (549cm x 132cm)	6981	26423	175	80	40	20
SEQUOIA SPIRIT™	16'8" x 49" (508cm x 124cm)	5061	19156	125	55	30	15
POOL SET	18'8" x 53" (549cm x 135cm)	6981	26423	175	80	40	20
	20' x 12' x 48" (610cm x 366cm x 122cm)	4393	16628	110	50	30	15
OVAL FRAME POOL	24' x 12' x 48" (732cm x 366cm x 122cm)	5407	20465	132	60	35	15
FUUL	28' x 12' x 48" (853cm x 366cm x 122cm)	6420	24300	150	70	40	20
	18' x 9' x 52" (549cm x 274cm x 132cm)	4545	17203	115	50	30	15
RECT. ULTRA FRAME POOL	24' x 12' x 52" (732cm x 366cm x 132cm)	8403	31805	210	95	60	30
	32' x 16' x 52" (975cm x 488cm x 132cm)	14364	54368	365	165	95	45

INTEX POOLS OPERATING TIME TABLE

This table shows the operating time required for normal use of the Saltwater System with AGP's.

		90% for Frame	/ (Calculated at Pool and 80% & Oval Pool)	Operating Time (hours) at different ambient/air temperatures			
			(Liters)	10 - 19°C (50 - 66°F)		29 - 36°C (84 - 97°F)	37- 42 °C (99 - 108°F)
INTEX ABOVE G	ROUND POOLS (AGP's)						
	15' x 36" (457cm x 91cm)	2822	10681	1	3	3	3
	15' x 42" (457cm x 107cm)	3284	12430	1	3	3	3
	15' x 48" (457cm x 122cm)	3736	14141	2	3	3	3
EASY SET [®]	16' x 42" (488cm x 107cm)	3754	14209	2	3	3	3
POOL	16' x 48" (488cm x 122cm)	4273	16173	2	3	3	4
	18' x 42" (549cm x 107cm)	4786	18115	3	4	5	6
	18' x 48" (549cm x 122cm)	5455	20647	3	4	5	6
	18' x 52" (549cm x 132cm)	5894	22309	3	5	6	7
	15' x 36" (457cm x 91cm)	3282	12422	1	3	3	3
	15' x 42" (457cm x 107cm)	3861	14614	2	3	3	3
	15' x 48" (457cm x 122cm)	4440	16805	3	3	3	4
CIRCULAR	16' x 48" (488cm x 122cm)	5061	19156	3	4	5	6
METAL	16' x 52" (488cm x 132cm)	5501	20821	3	4	5	6
FRAME POOL	18' x 48" (549cm x 122cm)	6423	24311	4	5	6	7
	18' x 52" (549cm x 132cm)	6981	26423	4	5	6	7
	24' x 48" (732cm x 122cm)	11483	43462	7	9	10	11
	24' x 52" (732cm x 132cm)	12481	47241	8	10	11	12
ULTRA FRAME	16' x 48" (488cm x 122cm)	5061	19156	3	4	5	6
POOL	18' x 52" (549cm x 132cm)	6981	26423	4	5	6	7
SEQUOIA SPIRIT™	16'8" x 49" (508cm x 124cm)	5061	19156	3	4	5	6
POOL SET	18'8" x 53" (549cm x 135cm)	6981	26423	4	5	6	7
	20' x 12' x 48" (610cm x 366cm x 122cm)	4393	16628	2	4	5	6
OVAL FRAME POOL	24' x 12' x 48" (732cm x 366cm x 122cm)	5407	20465	3	4	5	6
PUUL	28' x 12' x 48" (853cm x 366cm x 122cm)	6420	24300	4	5	6	7
	18' x 9' x 52" (549cm x 274cm x 132cm)	4545	17203	3	4	5	6
RECT. ULTRA	24' x 12' x 48" (732cm x 366cm x 122cm)	7757	29359	5	6	7	8
FRAME POOL	24' x 12' x 52" (732cm x 366cm x 132cm)	8403	31805	5	6	7	8
	32' x 16' x 52" (975cm x 488cm x 132cm)	14364	54368	9	11	12	12

NON INTEX POOLS SALT TABLE

Frame Pool and	alculated at 90% for 80% for Easy Set & I Pool)			Low Salt	led when Detected E "91")
(Gals)	(Liters)	(Lbs)	(Kgs)	(Lbs)	(Kgs)
2000	7500	50	20	10	5
4000	15000	100	45	25	10
6000	22500	150	65	40	20
8000	30000	200	90	55	25
10000	37500	250	110	70	30
12000	45500	300	135	80	35
14000	53000	350	160	95	45

SALT CALCULATION FOR POOLS

Salt Needed for Startup	Salt Needed for Startup	Salt Needed when	Salt Needed when
(Lbs)	(Kgs)	Low Salt Detected (Lbs)	Low Salt Detected (Kgs)
Water Capacity (Gals) x	Water Capacity (Liters) x	Water Capacity (Gals) x	Water Capacity (Liters) x
0.025	0.003	0.0067	0.0008

NON INTEX POOLS OPERATING TIME TABLE

Water	Capacity		Operating at different ambie	Гіme (hours) nt/air temperature	95
(Gals)	(Liters)	10 - 19°C (50 - 66°F)	20 - 28 °C (68 - 82 °F)	29 - 36 °C (84 - 97 °F)	37 - 42 °C (99 - 108 °F)
2000	7500	1	2	2	3
4000	15000	2	3	3	3
6000	22500	4	5	6	7
8000	30000	5	6	7	8
10000	37500	6	8	9	10
12000	45500	9	10	11	12
14000	53000	10	11	12	12

OPERATION INSTRUCTIONS

After the salt is dissolved, but before starting the Saltwater System be sure that:

- The entire filtering and chlorinating system is connected to a grounding type receptacle protected by a ground-fault circuit interrupter (GFCI).
- The filter pump operates several minutes before starting the Saltwater System (This removes air pockets and debris in the water hoses).
- No air is trapped in any of the hoses (Follow the Filter Pump Owner's manual to release any trapped air).
- Plug the power cord into the electrical outlet. Switch on the unit. Code "88" appears on the electronic control station's LED indicating the unit is in a Stand-By Mode, this is normal.



- Unlock keypad controls: Press and hold button for 2 seconds until you hear a short "beep", then press and hold button for another 2 seconds until you hear the second short "beep", LED flashes "00". This procedure unlocks the keypad control buttons.
- Set Saltwater System operating hours: Increase the scheduled number of hours of operation by pressing button, or reduce by pressing button. See "Operating Time Table" for pool size and required operating hours. Press button to select hours required, press if too many hours were selected. The built-in timer will now operate for the number of hours selected at the same time each day.

NOTE: The Saltwater System will not operate if the filter pump is not operating.

4. Re-lock keypad controls:

With the proper hour value showing, press and hold \bigcirc button for 2 seconds until you hear a long "beep", then press and hold \bigcirc button for another 2 seconds until you hear the second long "beep". A green "CHLORINE" light on the control panel will light up within a few minutes, which indicates the saltwater system starting chlorine production. With locking the control buttons into this setting you will have prevented unauthorized changing of the operating cycle.



NOTE: If you forget to Re-lock the keypad controls, the salt system will automatically lock the keypad controls and start working 1 minute later.

SAVE THESE INSTRUCTIONS



(1 to 12 hours max per cycle)

OPERATION INSTRUCTIONS (continued)

- 5. Operating hours can be re-adjusted if necessary. Follow steps 2 thru 4.
- 6. The scheduled operating hours displayed on the LED readout will decrease to zero as the unit operates. The LED shows "hours remaining" in the daily operating cycle.
- 7. The green "SLEEP" light on the control panel will appear when the cycle has ended. The system will go into a "Stand-By Mode" with the LED flashing "93" and "SLEEP" light on. The system automatically goes into a "Power Saving Mode" and will automatically turn itself back on in 24 hours to continue its daily chlorine production.
- 8. The "SLEEP" light will keep on, but the LED will be become blank after 1 hour indicating the Saltwater System is dormant (Power Saving Mode) waiting for the next startup cycle to begin. Press any button () or) to view the last LED code.



SPECIAL NOTES

 Always use a test strip to test the chlorine level before entering or using the pool. If the chlorine level is too high, wait until the chlorine level drops below 3 ppm before using the pool or operating the Saltwater System again.

<u>IMPORTANT</u>

Never use the pool if chlorine level is more than 3 ppm. Do not operate Saltwater System while the pool is in use or occupied.

- Heavy pool usage, and higher temperatures may require higher chlorine output (longer operation time) to maintain proper free available chlorine residuals.
- If a power outage occurs or the power cord is unplugged then the Saltwater System operating hours will have to be reset.

ALARM CODES

No chlorine production will occur if "Low Water Flow", "Low Salt Level" or "High Salt Level" are detected. If any of these conditions occur then the Saltwater System will sound an alarm that indicates chlorine production has stopped. A buzzer will sound and a Code (see below) will keep flashing on the LED for 1 hour. The buzzer and flashing light will end after one hour and the Saltwater System will go to Power Saving Mode. If this occurs then press any button () or) to view the code of the original problem so that it can be corrected.

Turn off the power of the unit and follow the solutions below to solve the problem. Turn on the unit again by following the "Operating Instructions".

- 1

Code	Cause	Remedy	Flashing	Buzzer
Low Water Flow or No Flow	 Circulation line blocked. 	 Ensure the plunger valves are opened (if any). Ensure your filter cartridge, cell are clear from debris and dirt. See "Maintenance". Release all trapped air in the circulation line. See Filter Pump Manual. 	Yes	Yes
	2. Incorrect inlet and outlet hose direction.	• Check for the direction of water inlet and water outlet hose. Reverse the hoses if necessary. See "Set Up Instructions".		
	3. Flow sensor conduit incorrectly installed.	• Check for the arrow on the follow sensor conduit toward the same direction with the one on the cell. Reverse the follow sensor conduit if necessary.		
	4. Scale on the flow sensor.	• Ensure the flow sensor (especially the hinge) is clean. See "Maintenance".		
	5. Flow sensor cord is loose.	 Check for flow sensor loose or not connected properly. Plug the flow sensor firmly into the flow sensor receptacle. 		
	6. Flow sensor failure.	 Contact Intex Service Center for replacement. 		
91	1. Dirt or scale on titanium plates.	 Remove the electrolytic cell for inspection and clean it if necessary. See "Maintenance". 	Yes	Yes
Low Salt Level	2. Low salt level / No salt.	 Add salt. See "Salt & Pool Water Volumes". 		
	3 . Electrolytic cell cord is loose.	• Check to see if cell cord is loose or not connected properly. Ensure the cell cord is plugged firmly into the cell housing receptacle.		
	4. Possible electrolytic cell failure.	Contact Intex Service Center. Replace the cell if needed.		
92 High Salt Level	1. High salt level.	 Partially drain the pool and refill with fresh water. See "Salt & Pool Water Volumes". 	Yes	Yes

LED CODE CHART

- 1

-

LED Reading	Definitions
88	Stand-By Mode (Start-up)
00	Zero Operating Hours
01	Minimum Operating Hour (1 hour remaining)
02	Operating Hours (2 hours remaining)
03	Operating Hours (3 hours remaining)
04	Operating Hours (4 hours remaining)
05	Operating Hours (5 hours remaining)
06	Operating Hours (6 hours remaining)
07	Operating Hours (7 hours remaining)
08	Operating Hours (8 hours remaining)
09	Operating Hours (9 hours remaining)
10	Operating Hours (10 hours remaining)
11	Operating Hours (11 hours remaining)
12	Maximum Operating Hours (12 hours remaining)
90	Alarm Code (Low Water Flow / No Flow)
91	Alarm Code (Low Salt Level)
92	Alarm Code (High Salt Level)
93	Stand-By Mode (Operating Process finished)
"BLANK"	No Power or "Power Saving Mode" waiting to start next Saltwater System cycle.


MAINTENANCE

MPORTAN1

Unplug power cord before cleaning and close plunger valves or insert black hat-like plugs in strainer opening to prevent water spillage. Plug in the power cord and open plunger valves or remove plugs when maintenance tasks are completed.

Flow Sensor Cleaning

- 1. In a counter-clockwise motion unscrew the collar of the flow sensor (7) and remove it from the flow sensor conduit (6). See "Part Reference".
- 2. If deposits and debris are seen on the surface of the flow sensor, then use a garden hose to wash it off.

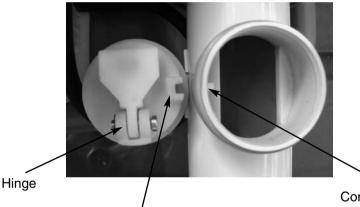

Connection Ridge

Locator Notch

- **3**. If flushing does not remove the deposits, use plastic brush (do not use a metal brush) to clean the surface and the hinge if necessary.
- 4. After the flow sensor has been inspected and cleaned, align the locator notch on the flow sensor to the connection ridge in the conduit, turn the collar in a clockwise motion tightening the sensor back into its position. Do not over tighten.

Electrolytic Cell Cleaning

The electrolytic cell (4) has a self cleaning function incorporated into the electronic control's programming. In most cases this self cleaning action will keep the cell working at optimum efficiency. If the pool water is hard (high mineral content) the cell may require periodic manual cleaning. Follow the cleaning instructions below. To maintain maximum performance, it is recommended that you open and visually inspect the electrolytic cell (4) every 1 month.


MAINTENANCE (continued)

Visual Inspection and Cleaning:

- 1. Switch off the unit, unplug the power cord from the electrical socket.
- For filter pumps with 1-1/4" (32mm) hose size To prevent water from escaping the pool, unscrew the strainer grids from the strainer connectors and insert the hat-like plugs into the strainer connectors.
 For filter pumps with 1-1/2" (38mm) hose size Grasp a plunger valve handle. Turn the handle counter-clockwise, push down until it stops and then
 - turn it clockwise until the plastic protruding notch anchors in the "0/I" position. Repeat for the 2nd plunger valve. This prevents the water from flowing out of the pool.
- 3. Disconnect the flow sensor.



4. Disconnect the adaptor A from the Saltwater System outlet. Look inside the electrolytic cell (4) inspect for scale formation (light colored crusty or flaky deposits) on the titanium plates. If no deposits and debris are visible reinstall the adaptor A (1), and the flow sensor.

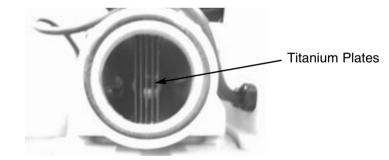

5. If deposits and debris are seen on the titanium plates, use a high pressure garden hose and try to flush them off. Only flush from the direction of water inlet to avoid damaging the flow sensor. Do not use any metal tool as this will scratch the coating off the plates. Note that a buildup on the cell indicates that there is an unusually high calcium level in the pool. If this is not corrected, you have to frequently check and clean the cell. To avoid this, always keep your pool chemistry at the recommended levels. See "Pool Maintenance & Chemical Definitions" for reference.

MAINTENANCE (continued)

6. If flushing does not remove the deposits on the plate then disconnect the cell from the base by removing the 4 mounting screws (3). Disconnect the flow sensor from the top of the cell and unplug the electrolytic cell cord. Assemble the cell cover (11) onto the bottom of cell and pour the kitchen grade vinegar into to cell until all titanium plates are immersed, soak for 2-3 hours and then flush with high pressure water from the garden hose.





Reconnect electrolytic cell reversing steps 3, 4, 5 and 7. (Reset the Saltwater System's operating hours)
 NOTE: After cleaning the operating hours have to be reset.

LONG TERM STORAGE

- 1. Disconnect power cord from electrical outlet.
- **2**. After pool is emptied of all water, disconnect the Saltwater System from the hoses reversing the installation instructions.
- **3**. Air-dry the unit before storage (It may be prudent to visually inspect and clean the electrolytic cell at this time).
- Store the unit and accessories in a dry, temperature controlled, between 32 degrees Fahrenheit (0 degrees Celsius) and 104 degrees Fahrenheit (40 degrees Celsius) storage location.
- 5. The original packing carton can be used for storage.

INTEX® 3-WAY TEST STRIPS (PACKED WITH THE PRODUCT)

3-Way Test Strips can test the "Free Chlorine", "pH", and "Total Alkalinity" levels at the same time. Directions and Use:

- 1. Dip entire strip into water and remove immediately.
- 2. Hold strip level for 15 seconds (do not shake excess water from strip).
- **3**. Compare free chlorine, pH and total alkalinity strip pad to the color chart on packaging label. Adjust pool water as necessary. Proper technique is important for water testing. Be sure to read and follow the written strip instructions.

POOL MAINTENANCE & CHEMICAL DEFINITIONS

- 4

Prefe	rred Water Chemi	istry Reading	
	Minimum	Ideal	Maximum
Free Chlorine	0	1.0 - 3.0 ppm	3.0 ppm
Combined Chlorine	0	0	0.2 ppm
рН	7.2	7.4 - 7.6	7.8
Total Alkalinity	100 ppm	100 - 140 ppm	140 ppm
Calcium Hardness	150 ppm	200 - 400 ppm	500 - 1000 ppm
Stabilizer (Cyanuric Acid)	10 ppm	30 - 50 ppm	150 ppm
Free Chlorine -	Is the chlorine resid	lual present in pool v	vater.
	wastes.	action of free chloring	
	Result if too high -	Sharp chlorinous oc	lor, eye irritation.
	Result if too low -	es how acidic or bas Corroded metals, ey destruction of total a Scale formation, clo filter runs, eye & ski chlorine efficiency.	ye & skin irritation, alkalinity. udy water, shorter
	 Indicates the degree of the water's resistance to change in pH. It determines the speed and ease of pH change, so always adjust total alkalinity before adjusting the pH level. Result if too low - Corroded metals, eye & skin irritation Low alkalinity will cause the pH to b unstable. Any chemical added to th water will have an affect on pH. Result if too high - Scale formation, cloudy water, eye & skin irritation, poor chlorine efficiency. 		
	dissolved in the wat		will cause the
Stabilizer - (Cyanuric Acid)	Stabilizers extend th	ne life of chlorine in s	swimming pools.

DO NOT add pool chemicals directly to the skimmer. This may damage the cell.
Maintaining high salt and sanitizer levels above recommended range can contribute to corrosion of pool equipment.

Check the expiry date of the test kit as test results may be inaccurate if used after that date.

• If additional sanitizer is required due to heavy bather load, use a pool sanitizer based on Trichloro-s-triazinetrione or sodium dichloro-s-triazinetrione dihydrate.

TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	REMEDY		
INSUFFICIENT CHLORINE	 Insufficient operating hours of the Saltwater System. Insufficient (Less than 2000ppm) salt level in pool water. Chlorine loss due to intense sunlight exposure. The bather load has increased. Clogged or dirty electrolytic cell. 	 Increase the Saltwater System operating time per day. See "Operating Instructions". Test the Salt Level with Test Kit, and adjust as needed. See "Salt & Pool Water Volumes". Use Pool Cover when the pool is not use and/or when the unit is operating. Increase the Saltwater System operating time per day. See "Operating Instructions". Remove the cell for inspection, clean it if necessary. See "Maintenance". 		
WHITE FLAKES IN THE WATER	 Excessive calcium hardness is present in pool water. 	• Drain about 20 to 25% of the pool water and add fresh water to decrease the calcium hardness. Visually inspect the electrolytic cell for scale build-up and clean the electrolytic cell if necessary.		
NO LED DISPLAY	 No power supply. Power fuse blown. LED failure. 	 Check for power cord loose or not connected properly. Contact Intex Service Center for replacement. Contact Intex Service Center for replacement. 		

IMPORTANT

If you continue to experience difficulty, please contact our Consumer Service Department for assistance. See back cover for contact information.

L

English 101

TROUBLESHOOTING GUIDE (continued)		
LED PANEL CODE	PROBLEM	REMED
LED Panel Code Flash & Alarm On (NOTE: Always turn off the power before cleaning and servicing).		
	1. Circulation line is blocked.	 Ensure the plunger valves are opened (if any). Ensure your filter cartridge, cell are clear from debris and dirt. See "Maintenance". Release all trapped air in the circulation line. See Filter Pump Manual.
	 Incorrect inlet and outlet hose direction. 	• Check for the direction of water inlet and water outlet hose. Reverse the hoses if necessary. See "Set Up Instructions".
	 Flow sensor conduit incorrectly installed. 	• Check for the arrow on the follow sensor conduit toward the same direction with the one on the cell. Reverse the follow sensor conduit if necessary.
	4. Scale on the flow sensor.	Ensure the flow sensor (especially the hinge) is clean. See "Maintenance".
	5. Flow sensor cord is loose.	 Check for flow sensor loose or not connected properly. Plug the flow sensor firmly into the flow sensor receptacle.
	6. Flow sensor failure.	Contact Intex Service Center for replacement.
• • • • • • • • • • • • • • • • • • •	1. Dirt or scale on titanium plates.	 Remove the electrolytic cell for inspection and clean it if necessary. See "Maintenance".
	2. Low salt level / No salt.	 Add salt. See "Salt & Pool Water Volumes".
	3. Electrolytic cell cord is loose.	Check to see if cell cord is loose or not connected properly. Ensure the cell cord is plugged firmly into the cell housing receptacle.
	4. Possible electrolytic cell failure.	Contact Intex Service Center. Replace the cell if needed.
92 © ©	1. High salt level.	 Partially drain the pool and refill with fresh water. See "Salt & Pool Water Volumes".
		Contact Intex Service Center.

GENERAL AQUATIC SAFETY

Water recreation is both fun and therapeutic. However, it involves inherent risks of injury and death. To reduce your risk of injury, read and follow all product, package and package insert warnings and instructions. Remember, however, that product warnings, instructions and safety guidelines cover some common risks of water recreation, but do not cover all instances or risk and or danger.

For additional safeguards, also familiarize yourself with the following general guidelines as well as guidelines provided by nationally recognized Safety Organizations:

- Demand constant supervision.
- Learn to swim.
- Take the time to learn CPR and first aid.
- Instruct anyone who is watching your children about potential pool hazards and about the use of protective devices such as locked doors, barriers, etc.
- Teach children what to do in case of an emergency.
- Always use common sense and good judgement when enjoying any water activity.
- Supervise, Supervise, Supervise.

For additional information on safety, please visit

- The Association of Pool and Spa Professionals: The Sensible Way to Enjoy Your Aboveground/Onground Swimming Pool www.nspi.org
- American Academy of Pediatrics: Pool Safety for Children www.aap.org
- Red Cross www.redcross.org
- Safe Kids www.safekids.org
- Home Safety Council: Safety Guide www.homesafetycouncil.org
- Toy Industry Association: Toy Safety www.toy-tia.org

SAFETY IN YOUR POOL

Safe swimming depends on constant attention to the rules. The "NO DIVING" sign within this manual can be posted near your pool to help keep everyone alert to the danger. You may also wish to copy and laminate the sign for protection from the elements.

LIMITED WARRANTY

Your Krystal Clear[™] Saltwater System has been manufactured using the highest quality materials and workmanship. All Intex products have been inspected and found free of defects prior to leaving the factory. This Limited Warranty applies only to the Krystal Clear[™] Saltwater System.

The provisions of this Limited Warranty apply only to the original purchaser and is not transferable. This Limited Warranty is valid for a period of two (2) years from the date of the initial retail purchase. Keep your original sales receipt with this manual, as proof of purchase will be required and must accompany warranty claims or the Limited Warranty is invalid.

If a manufacturing defect is found within this two (2) years period, please contact the appropriate Intex Service Center listed in this manual. The Service Center will determine the validity of the claim. If the Service Center directs you to return the product, please carefully package the product and send with shipping and insurance prepaid to the Service Center. Upon receipt of the returned product, the Intex Service Center will inspect the item and determine the validity of the claim. If the provisions of this warranty cover the item, the item will be repaired or replaced at no charge.

Any and all disputes regarding the provisions of this Limited Warranty shall be brought before an informal dispute settlement board and unless and until the provisions of these paragraphs are carried forth, no civil action may be instituted. The methods and procedures of this settlement board shall be subject to the rules and regulations set forth by the Federal Trade Commission (F.T.C.). IMPLIED WARRANTIES ARE LIMITED TO THE TERMS OF THIS WARRANTY AND IN NO EVENT SHALL INTEX, THEIR AUTHORIZED AGENTS OR EMPLOYEES BE LIABLE TO THE BUYER OR ANY OTHER PARTY FOR DIRECT OR CONSEQUENTIAL DAMAGES OR LIABILITIES. Some states, or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This Limited Warranty does not apply if the Krystal Clear[™] Saltwater System is subject to negligence, abnormal use or operation, accident, improper operation, improper voltage or current contrary to operating instructions, or to damage by circumstances beyond Intex's control, including but not limited to, ordinary wear and tear and damage caused by exposure to fire, flood, freezing, rain, or other external environmental forces. This Limited Warranty applies only to those parts and components sold by Intex. The Limited Warranty does not cover unauthorized alterations, repairs or disassembly by anyone other than Intex Service Center personnel.

DO NOT GO BACK TO THE PLACE OF PURCHASE FOR RETURN OR REPLACEMENT. IF YOU ARE MISSING PARTS OR NEED ASSISTANCE, PLEASE CALL US TOLL-FREE (FOR U.S. AND CANADIAN RESIDENTS): 1-800-234-6839.

Proof of Purchase must accompany all returns or the warranty claim will be invalid.

NO DIVING OR JUMPING DIVING MAY RESULT IN PERMANENT INJURY OR DEATH SHALLOW WATEI



Be Safe. Swim with a friend.

Children must be accompanied by an adult.
Don't swim when using alcohol or drugs.
Be familiar with the pool before swimming.

No running, jumping, or horseplay in or around pool

No glass in pool area.

TO AVOID SERIOUS INJURY ALL POOL USERS MUST KNOW AND FOLLOW THESE SAFETY RULES.



POST THIS WARNING NEAR YOUR POOL

COUNTRIES/REGIONS	SERVICE CENTER LOCATIONS
• UNITED STATES • CANADA	INTEX RECREATION CORP. 14779 Bar Harbor Road Fontana, CA 92336 Tel: 1-800-234-6839 Fax: 310-549-2900 Website: www.intexcorp.com (U.S./Canada only) Consumer Service Hours: 8:30 am to 5:00 pm Pacific Time, Mon. thru FRI. only.
• MEXICO	KAY INTERNACIONAL, S.A. DE C.V. Avenida San Jeronimo #550-5° Piso, Col. Jardines del Pedregal, C.P. 01900 México D.F. Tel: 01-800-347-4020 (Collect Call) Tel: 55-9172-8035 Fax: 55-9172-8047 E-mail: servicenter@kayinternacional.com Website: www.intexmexico.com.mx
• PANAMA • PARAGUAY • ECUADOR • HONDURAS • EL SALVADOR • NICARAGUA	SUPRO MUNDIAL S.A./ PRODUCTOS SUPERIORES S.A. Boulevard Andrews, Albrook, Panama, Rep. of Panama Tel: 507-300-3800 Fax: 507-300-3813 E-mail: suproadmin@supropanama.com
• COSTA RICA • DOMINICAN REPUBLIC • GUATEMALA • COLOMBIA • VENEZUELA • PUERTO RICO	CENTURY USA, LLC 4731 W. Atlantic Ave., Suite B-3 Delray Beach, FL 33445, USA Tel: 561-495-0648 Fax: 561-495-4782 E-mail: sales@centuryusa.com
• MIDDLE EAST REGION	FIRST GROUP INTERNATIONAL Al Moosa Group Building, 1st Floor, Office 102 & 103, UMM Hurair Road, Karama, Dubai, UAE Tel: 00971-4-3373322 Fax: 00971-4-3375115 E-mail: info@firstgroupinternational.com Website: www.firstgroupinternational.com
• ASIA For answers to most frequently asked questions	INTEX DEVELOPMENT CO. LTD. 8th Floor, Dah Sing Financial Centre 108 Gloucester Road, Wanchai, Hong Kong Tel: 852-28270000 Fax: 852-23118200 E-mail: xmservicesupport@intexcorp.com.cn Website: www.intexdevelopment.com

For answers to most frequently asked questions, please visit WWW.intexcorp.com. Non U.S. Residents, please visit WWW.intexdevelopment.com.



For Residents of the U.S. & Canada: INTEX RECREATION CORP. Attn: Consumer Service 14779 Bar Harbor Road Fontana, CA 92336 Phone: 1-800-234-6839 Fax: (310) 549-2900

Consumer Service Hours: 8:30 am to 5:00 pm Pacific time Monday thru Friday only Website: www.intexcorp.com

For Residents outside of the U.S. and Canada: Please refer to the Service Center Locations

©2008 Intex Marketing Ltd. - Intex Development Co. Ltd. -Intex Trading Ltd. - Intex Recreation Corp. All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China.

®[™] Trademarks used in some countries of the world under license from/®[™] Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/Intex Marketing Ltd. to/a/a/an Intex Trading Ltd., Intex Development Co. Ltd., G.P.O Box 28829, Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/Distribué dans l'Union Européenne par/Distribuido en la unión Europea por/Vertrieb in der Europäischen Union durch/Intex Trading B.V., P.O. Box nr. 1075 – 4700 BB Roosendaal – The Netherlands

